


# CISS USE MANUAL FOR EPSON PHOTO R270/R265 PRINTER

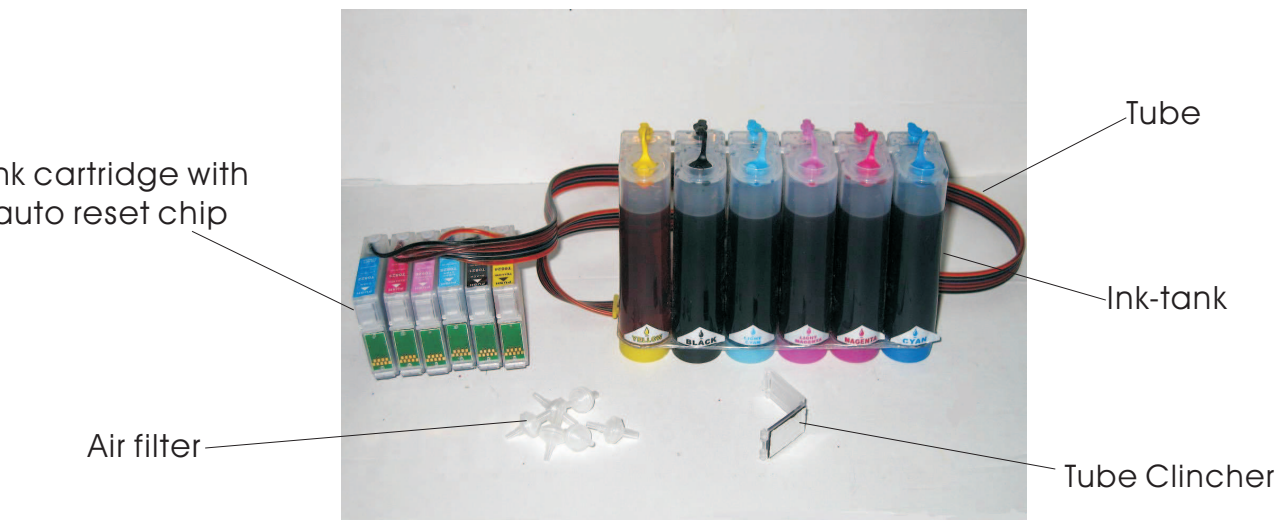

1) Take down the cover of the ink cart by screwdriver



2) Put the ink cartridge from left to right, through the under-side of the printer's beam



3) Press the Change Cartridge button



4) Insert the ink cartridge into ink cart, until hearing a click



5) Pull out the small rubber plug in the air hole and put air filter into air hole



6) Use tube clincher fix the tube on printer

## Notice:

1. Please don't take out cartridge at random after installing the CISS.
2. Keep the Ink tank on the same level with printer.
3. The air plug in the ink tank must be opened and keep the ink tube smoothly while in service. Otherwise it will be not smooth enough to print normally.
4. When ink is under alert level, please refill ink in time.

## Caution:

1. Keep out of reach of children
2. Store at room temperature
3. Keep out of direct sunshine
4. Do not drop ink tank or handle roughly

All brand names and trademarks are the properties of their respective holders and are referred to here for descriptive purposes only.